

STN1 flash trigger firmware device upgrade instructions

=====

1. Download <STN1 Upgrade tool.EXE> application to a WINDOWS computer
2. Download the corresponding <ST1N**.hex>, save
3. Open the program of firmware update
4. First, insert the USB cable into the USB interface of STN1, then press and hold the lead flash device at the top of the circular test button, and then at the other end of the USB is inserted into the USB interface of the computer, this dialog box displayed as "Connected", "Loader" button will be highlighted, ST1 device display "Upgrade", green indicator regularly flash
5. Click on the dialog box to select the "Loader", select the firmware version to be refreshed, click it to open
6. The dialog box to "Upgrade" button is lit, click "Upgrade". At this time, the process of green dialog box below is in the implementation. After the completion of the execution, will be pop-up "Upgrade finished"
7. Refresh finish, pull out the USB line, turn on, task finished.

Head of Note: do not interrupt the connection of the flash and the computer!